


REMOTE CONTROLTM FISHIN' POLE

Patent pend.

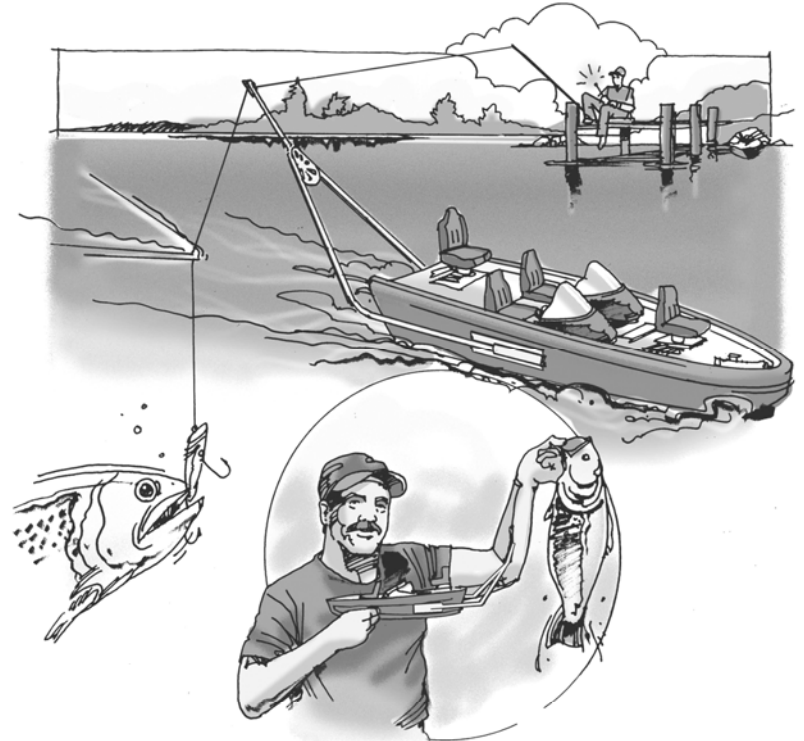

THE "RC FISHIN POLE" OWNER MANUAL/ INSTRUCTIONS

MADE BY FISH FUN CO.
WWW.RCFISHINGWORLD.COM
CALL 1-734-502-8796
PATENT PENDING
MADE IN USA, 2008

CONTENTS

PAGE 1.....	COVER
PAGE 2.....	TABLE OF CONTENTS, TIPS
PAGE 3.....	THE CONCEPT OF RC FISHING
PAGE 4.....	PICKING A BOAT YOU USE
PAGE 5.....	GENERAL OPERATION EXPLAINED
PAGE 6,7.....	PARTS IDENTIFICATION
PAGE 8,9,10,11....	INSTRUCTIONS
PAGE 12.....	PRECAUTIONS, WARRANTY

RC FISHING TIPS

Once you have learned the basic operation of The “RC FISHING POLE” you can probably think of other ways to fish using it.

1. Add a bobber to your line and keep the line attached to the boat, watch as the bobber disconnects from the boat when a fish hits.
2. Once your line is at the spot you can give the line a gentle tug to release it from the boat so your line stays there, then bring the boat back.
3. Set your bait high for weedy areas, tug the line off the boat when you find a good place.
4. Try putting a spoon on and trolling with the boat.
5. Try using a very small split-shot sinker on your fishing line to stick the soft connector to, that way your line depth won't change.
6. Try using a small section of a regular drinking straw, about 1 1/2” long and threading your line through it, and wrapping the soft connector to it. That way you can move your line depth up or down when you get the boat to your fishing spot

THE CONCEPT OF RC FISHING


DRIVE YOUR FISHING LINE TO THE FISH

The “RC FISHING POLE” is designed to attach to most any Electric Remote Control boat. Most boats will work well, we recommend one that over 19-20 inches long. The bigger the boat the further you will be able to fish, and the bigger the boat the more options.

FITS ON ANY RC BOAT

The ‘RC FISHING POLE” is also designed to be removable, there is also an extra set of holders included so you may interchange it between two boats if you want.

Once the “RC FISHING POLE” is attached it becomes a part of your fishing rod, The difference is you attach your fishing line from your rod to the “RC FISHING POLE” . You then open the bail on your rod like your going to cast and drive your line with the Remote Controller . Once a fish hits the line automatically disconnects from the “RC FISHING POLE” and you reel the fish in with your regular fishing rod.

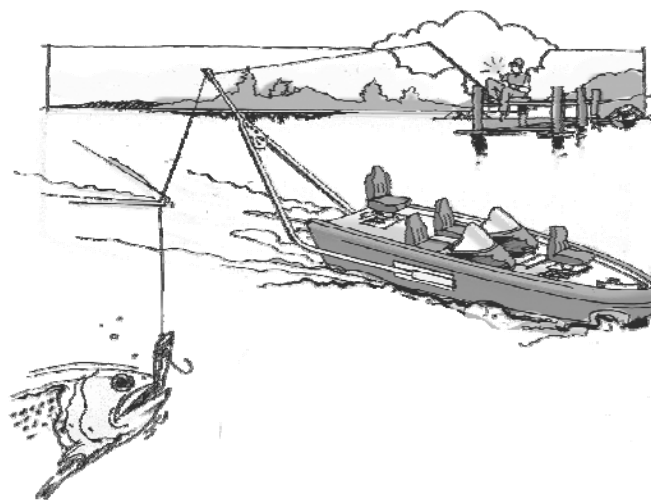

THE BOAT YOU USE

This part contains Information about the boat you choose.

You can use an Electric or a Gas Remote Control Boat.

The advantage of an Electric boat is that you can stop it with the motor not running . We recommend an Electric Boat for that reason, but a Gas boat will also work. You can also use a Hovercraft Boat for fishing in weedy areas, the motor is quieter too.

When picking out a boat keep in mind the type of fishing you will be doing and the water conditions. The bigger boats tend to be better in water, have a greater distance, and the batteries usually last longer. We recommend that you use a boat over 19", because there might be too much weight on the boat and it will not be balanced and can sink. Mounting The "RC FISHING POLE" on the middle of the boat keeps the boat better balanced. On bigger boats mounting The " RC FISHING POLE" on the middle is not necessary, it can be mounted towards the rear. Some boats don't have sides suitable to mount, so you can mount The " RC FISHING POLE" on the deck, (top) of the boat.

Another thing about boats is that since you are going to use the boat for fishing, you might want to make modifications to the boat that will make fishing better. One thing you could do is add a little silicone sealer around areas you think might leak. If you need a boat check out our website or call us.

GENERAL OPERATION EXPLAINED

1. The rough connector goes, (sticks) on the tip of The "RC FISHING POLE" The soft connector is the one that goes onto your fishing line and gets folded over it. When you press the soft connector on, it will stick to the rough connector, that is what holds your line to the boat. Only a slight amount is needed to hold it there, if your fishing for panfish you want to lightly to press it on.

2. After baiting your hook, press the soft connector on your fishing line onto the rough connector on the tip of The "RC FISHING POLE"

3. Then open the caster (bail), on your fishing rod, like your going to cast it. Instead of casting it you use the Remote Controller that came with your boat to Drive your line where you want it.


4. When you get the line where you want it close the cast setting in your Fishing Rod. Leave the line on the Boat, or give it a gentle tug to release it from the Boat.

5. When a fish strikes your line it will automatically disconnect itself from the boat, then you reel it in with your Fishing Rod.


6. After you reel in the fish, you can use the Remote Controller to bring you boat back to you.

7. An extra set of holders is included, if you want to use the "RC POLE" on a different boat..


2 THE "RC FISHING POLE"

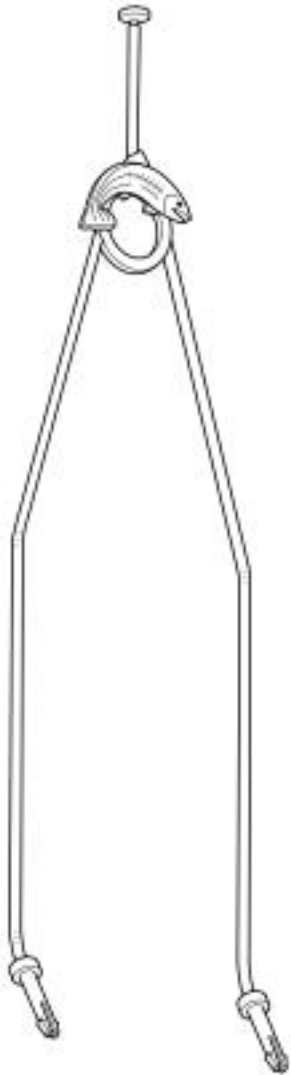


1. THE HOLDERS

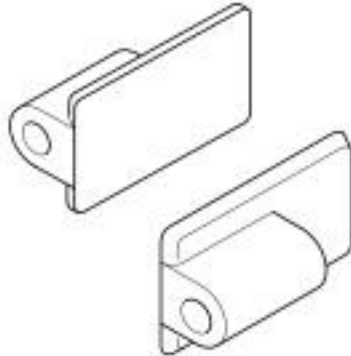

3. ROUGH CONNECTORS

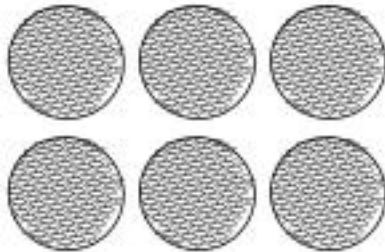

4. SOFT CONNECTORS

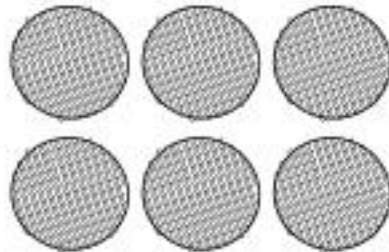

PARTS IDENTIFICATION

1. THE HOLDERS

THE "HOLDERS" ATTACH TO THE REMOTE CONTROL BOAT. THEY HAVE STICKY ADHESIVE ON THEM. WHEN THE PAPER IS PEELED OFF THEY ARE APPLIED ONTO THE BOAT. THEY ARE FOR HOLDING THE "RC FISHING POLE" TO THE RC BOAT.

2. THE "RC FISHING POLE"

THE "RC FISHING POLE IS PUSHED INTO THE HOLDERS AND CLIPS IN AUTOMATICALLY. IT IS FOR HOLDING THE FISHING LINE FROM THE FISHING ROD TO THE RC BOAT.

3. ROUGH CONNECTORS, (Velcro dots)

THE ROUGH CONNECTORS ARE ATTACHED TO THE END OF THE "RC FISHING POLE". WHEN A SOFT CONNECTOR ON THE FISHING LINE TOUCHES IT, IT STICKS TOGETHER SO THE RC BOAT CAN TAKE THE FISHING LINE OUT.

4. SOFT CONNECTORS, (Velcro dots)

SOFT CONNECTORS ARE PUT ONTO THE FISHING LINE FROM THE FISHING ROD. ONCE THE DEPTH OF THE LINE TO BE HUNG FROM THE RC BOAT IS DETERMINED, THE SOFT CONNECTOR IS SQUEEZED ONTO THE FISHING LINE AND FOLDED IN HALF OVER THE LINE. THE FISHING LINE WITH THE SOFT CONNECTOR IS TOUCHED ONTO THE ROUGH CONNECTOR ON THE END OF THE "RC FISHING POLE". THEN THE BOAT IS READY TO DRIVE.

1. Make sure the sides of the boat are clean of oil or dirt for the best bond when applying the holders on the boat. For smaller boats the holders should be placed towards the middle to keep the boat balanced. On bigger boats you may apply the holders towards the rear of the boat. On other boats, or crafts there may be a more ideal to place the holders, such as the top, that's up to you.

SEE FIGURE 1.

2. After locating the best spot for the holders, Peel off the paper backing from each holder and press one firmly on both sides of the boat.

SEE FIGURE 2.

3. After the holders are on the boat, push the ends of the "RC POLE" into each of the holders.

SEE FIGURE 3.

4. Your boat should look like this now with the "RC POLE" attached properly.

SEE FIGURE 4.

5. Peel a round rough connector and press it firmly on to the tip of the "RC POLE".


SEE FIGURE 5.

6. Now a round soft connector goes on to the fishing line. How far from the bait is up to you. Where you put it will be how much line is under the water. Peel off a round soft connector and firmly fold it over the fishing line.


SEE FIGURE 6.



POSITION OF HOLDERS

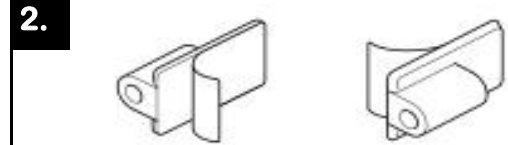


PEEL PAPER BACKING AND ATTACH

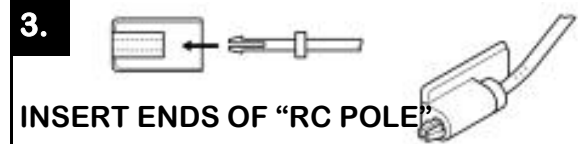

INSERT ENDS OF "RC POLE"



ROUGH CONNECTOR ON TIP



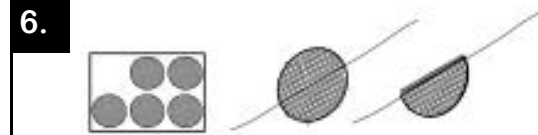


FOLD SOFT CONNECTOR OVER LINE

7. You decide how much line you want hanging from the “RC POLE” by where you fold the soft connector on the fishing line.
SEE FIGURE 7.

8. Now push the soft -connector from the fishing line on to the Rough -Connector on the tip of the “RC POLE”. How hard you press it together will determine how easy it comes off when a fish hits.
SEE FIGURE 8.

9. Now, if your fishing rod has a casting button push it, then use the remote controller to drive your line out to the fishing spot. If your rod has a bail cast, open it, then use the remote controller to drive the line out.

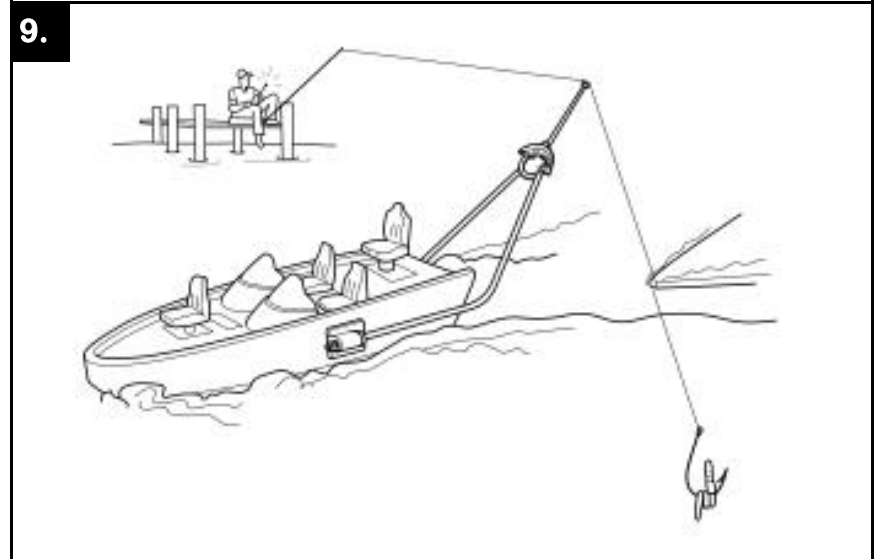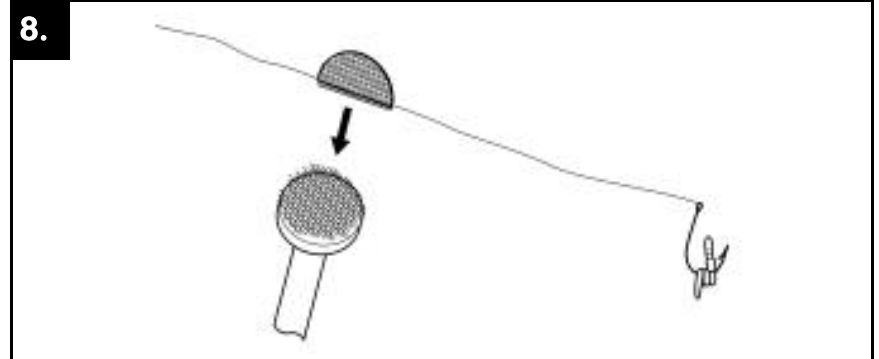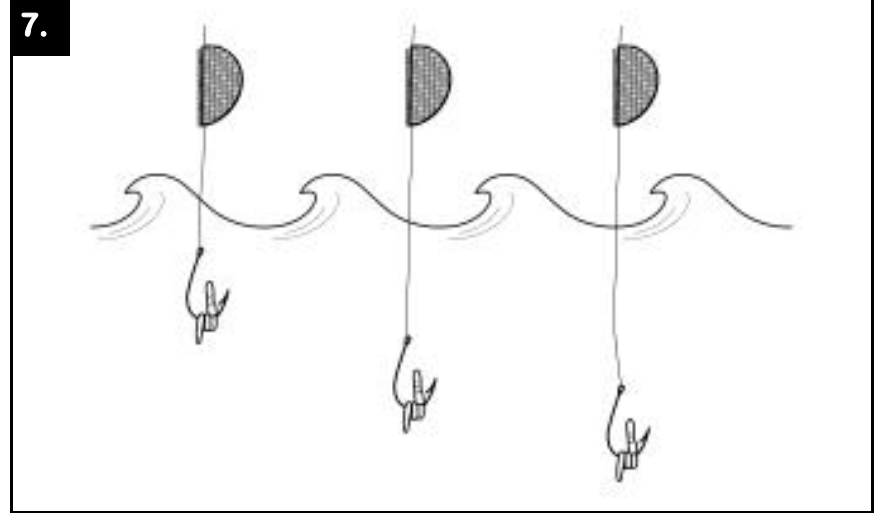

PRECAUTIONS

*Read the instructions carefully, and read the instructions that came with the boat or rc device that you use.

*It is not wise to use the reverse gear on the boat while the fishing line is attached, it could get tangled.

*Avoid weedy areas, the boat could get stuck.

*Avoid water conditions that are too rough, and windy conditions.

* Children should not operate the “RC FISHN’ POLE” unless under adult supervision.

LEGAL

Laws vary from state to state, check to see if it is legal in your state to use “THE RC FISHING POLE”.

LIMITED WARRANTY

The contents of this package have been quality control inspected and found free of any defects in material and workmanship. Additionally, FISH FUN CO. offers the original customer a limited warranty and will replace or repair any product found to be defective providing it is returned prepaid to either the dealer from which it was purchased or directly to FISH FUN CO. in its original package and in an unused state. Defects resulting from misuse, abuse or accident are expressly excluded from coverage under this warranty.. This warranty is in lieu of all warranties, expressed or implied, including the implied warranty of merchantability. Neither the seller nor manufacturer shall be liable for any loss or damage consequential or direct, arising from the use or inability to use this product. This includes any loss or damage to a remote control boat that arises or occurs with the use of The “RC FISHING POLE” This warranty applies only to The “RC FISHING POLE” , not the rc fishing boat. Some warranties for boats and rc devices exclude using the boat for anything other than its intended purpose. The warranty for the boat should be provided by the boat manufacturer. Since laws vary from state to state, the above exclusions may not pertain to you.